


PROGRAMMING YOUR SAFE

Batteries

1. Gently Twist the electronic keypad to the left. Behind the lock is the override keyhole.
2. Insert and turn the key clockwise.
3. Turn the handle clockwise and pull the door open.
4. Insert a 9V batteries into the battery compartment located on the interior of the panel.
5. To test the batteries, enter your security code; If the batteries are low the red light will come on momentarily.

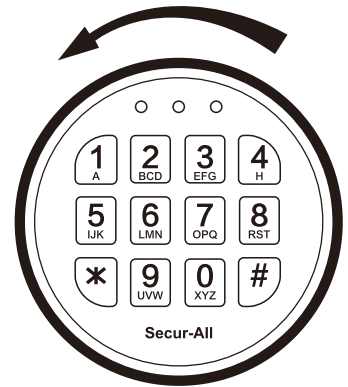

Program User code

This safe comes programmed with a preset factory code - 1 5 9 . For security purposes you will need to change this to your own personal code by following these steps:

1. With the door open, press the red reset button, start setting code when the yellow lights goes on.
 2. Input new code (3-8 digits), and press the "*" button to confirm with 2 buzzer beeps, which indicates the acceptance and storage of the new code
 3. If the yellow light flashes with 3 buzzer beeps, which means the code changing is not effective, and you need to try again
- If you wish to change your code again, re-follow the steps above.

Using your safe

You will now be able to unlock and open your safe using your own user code.

Using your safe

1. Input your user's code (3 to 8 digits), each pressing results one buzzer beep and yellow light flashes.
2. Press "#" button, the green light will be on.
3. Rotate the handle clockwise, the door is opened.

If the code is entered incorrectly, the Yellow light will flash with 3 buzzer beeps and you will not be able to open the safe. If the code is entered incorrectly 3 times the safe will automatic lock for 20 seconds. Another 3 incorrect entries consecutively, the safe will lock for 5 minutes.)

The emergency keys are provided for:

- initial entry to the safe.
- a means of access if the batteries go flat.
- a means of access if you forget your user code. They should not be used for everyday access. Responsibility will not be taken if the user misplaces the emergency keys. Store these keys in a safe place but NOT inside the safe!

Turn the keypad sound off/on

You can mute the keypad by entering the code *633. To turn it back on, enter code *66.

Important warning

Do Not Mix Old And New Batteries. Do Not Mix Alkaline, Standard(Carbon-Zinc), Or Rechargeable(Nickel-Cadmium) Batteries. Non-rechargeable batteries are not to be recharged. Batteries are to be inserted with the correct polarity. Exhausted batteries are to be removed from the product.

!! Do not store access keys inside your safe !!