

Replace the battery in –II series entrypad.

One 9V alkaline battery is installed in the compartment in the bottom of the –II series entrypad. To replace the battery, pull out the battery compartment first. Follow these steps:

I Release the latch of the battery compartment until it comes to the end, See Fig. 2.

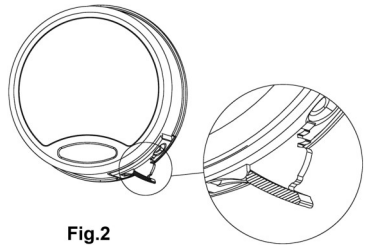


Fig.2

II Pull out the battery compartment from the bottom of the entrypad, See Fig. 3.

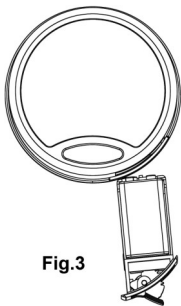


Fig.3

Take out the battery and replace with a new one. Make sure connect the new battery correctly about the positive and negative poles. See Fig.4.

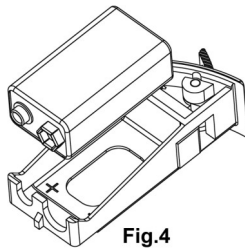


Fig.4

III Put the battery compartment back into the entrypad. Push it up until it is in line with or level with the cover. Pull up the latch of the battery compartment until it is tight and secure too. See Fig. 1.

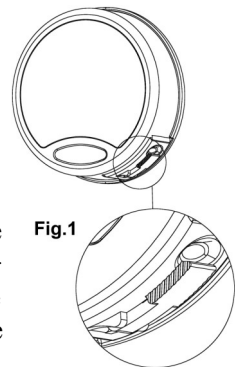


Fig.1